


## Snom Configuration Identity

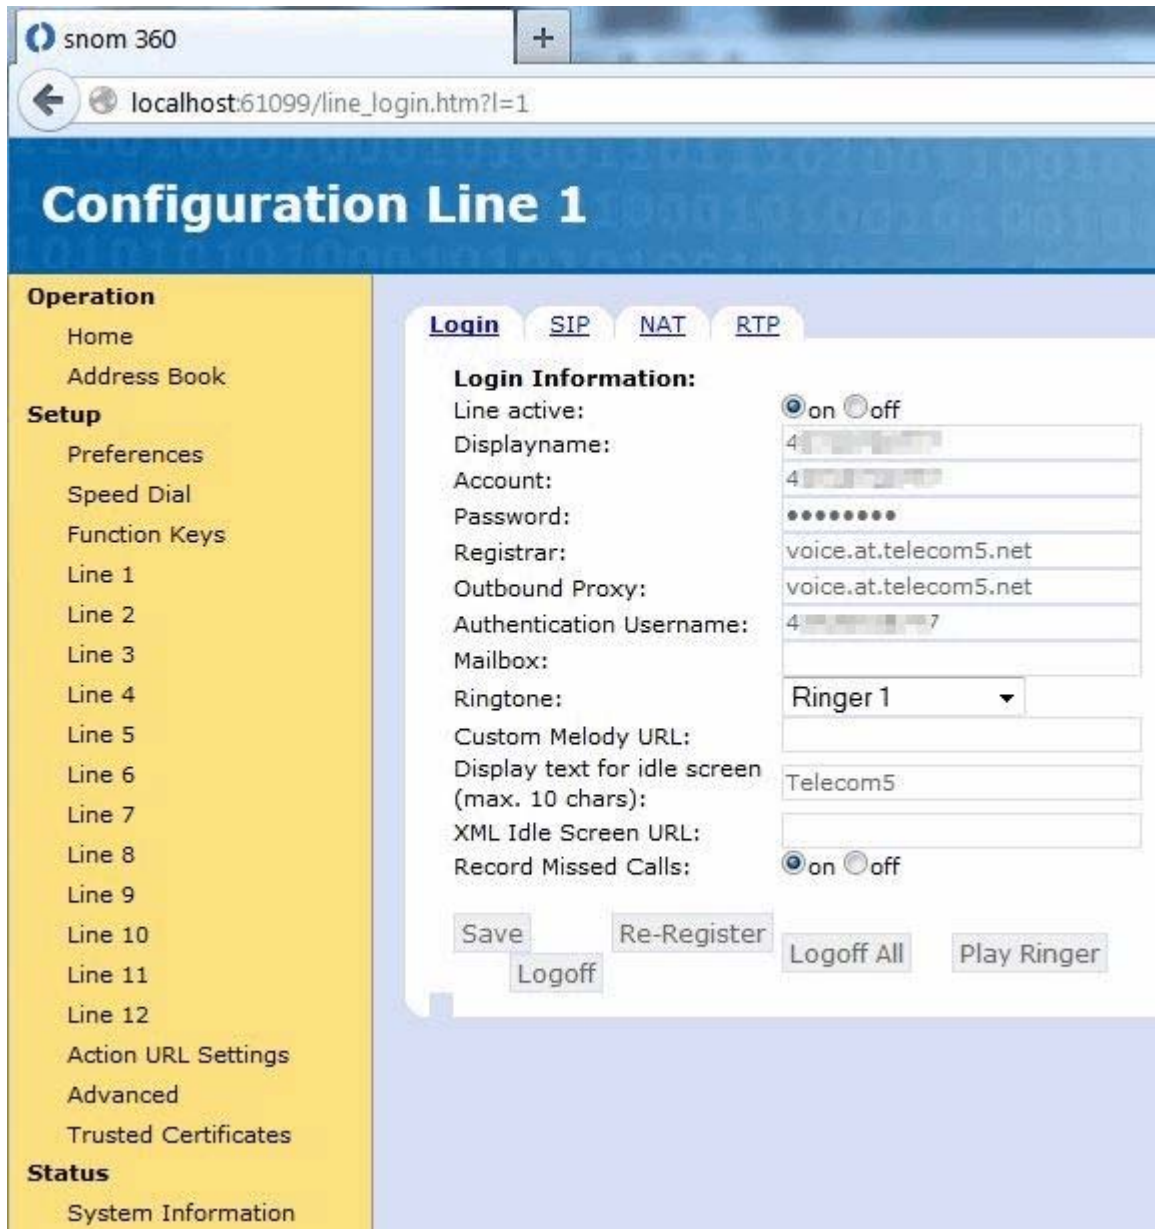

The screenshot shows the web interface for configuring a Snom 360 phone. The browser address bar shows 'localhost:61099/line\_login.htm?l=1'. The main heading is 'Configuration Line 1'. On the left is a navigation menu with sections: Operation (Home, Address Book), Setup (Preferences, Speed Dial, Function Keys, Line 1-12, Action URL Settings, Advanced, Trusted Certificates), and Status (System Information). The main content area has tabs for 'Login', 'SIP', 'NAT', and 'RTP', with 'Login' selected. Under 'Login Information', there are fields for: Line active (radio buttons for on/off, 'on' is selected), Displayname (4...), Account (4...), Password (masked with dots), Registrar (voice.at.telecom5.net), Outbound Proxy (voice.at.telecom5.net), Authentication Username (4...7), Mailbox (empty), Ringtone (Ringer 1 dropdown), Custom Melody URL (empty), Display text for idle screen (max. 10 chars) (Telecom5), XML Idle Screen URL (empty), and Record Missed Calls (radio buttons for on/off, 'on' is selected). At the bottom are buttons for Save, Re-Register, Logoff, Logoff All, and Play Ringer.

RTP: G729, G711a, G711u, GSM